


Program 2 - Chord Bank I

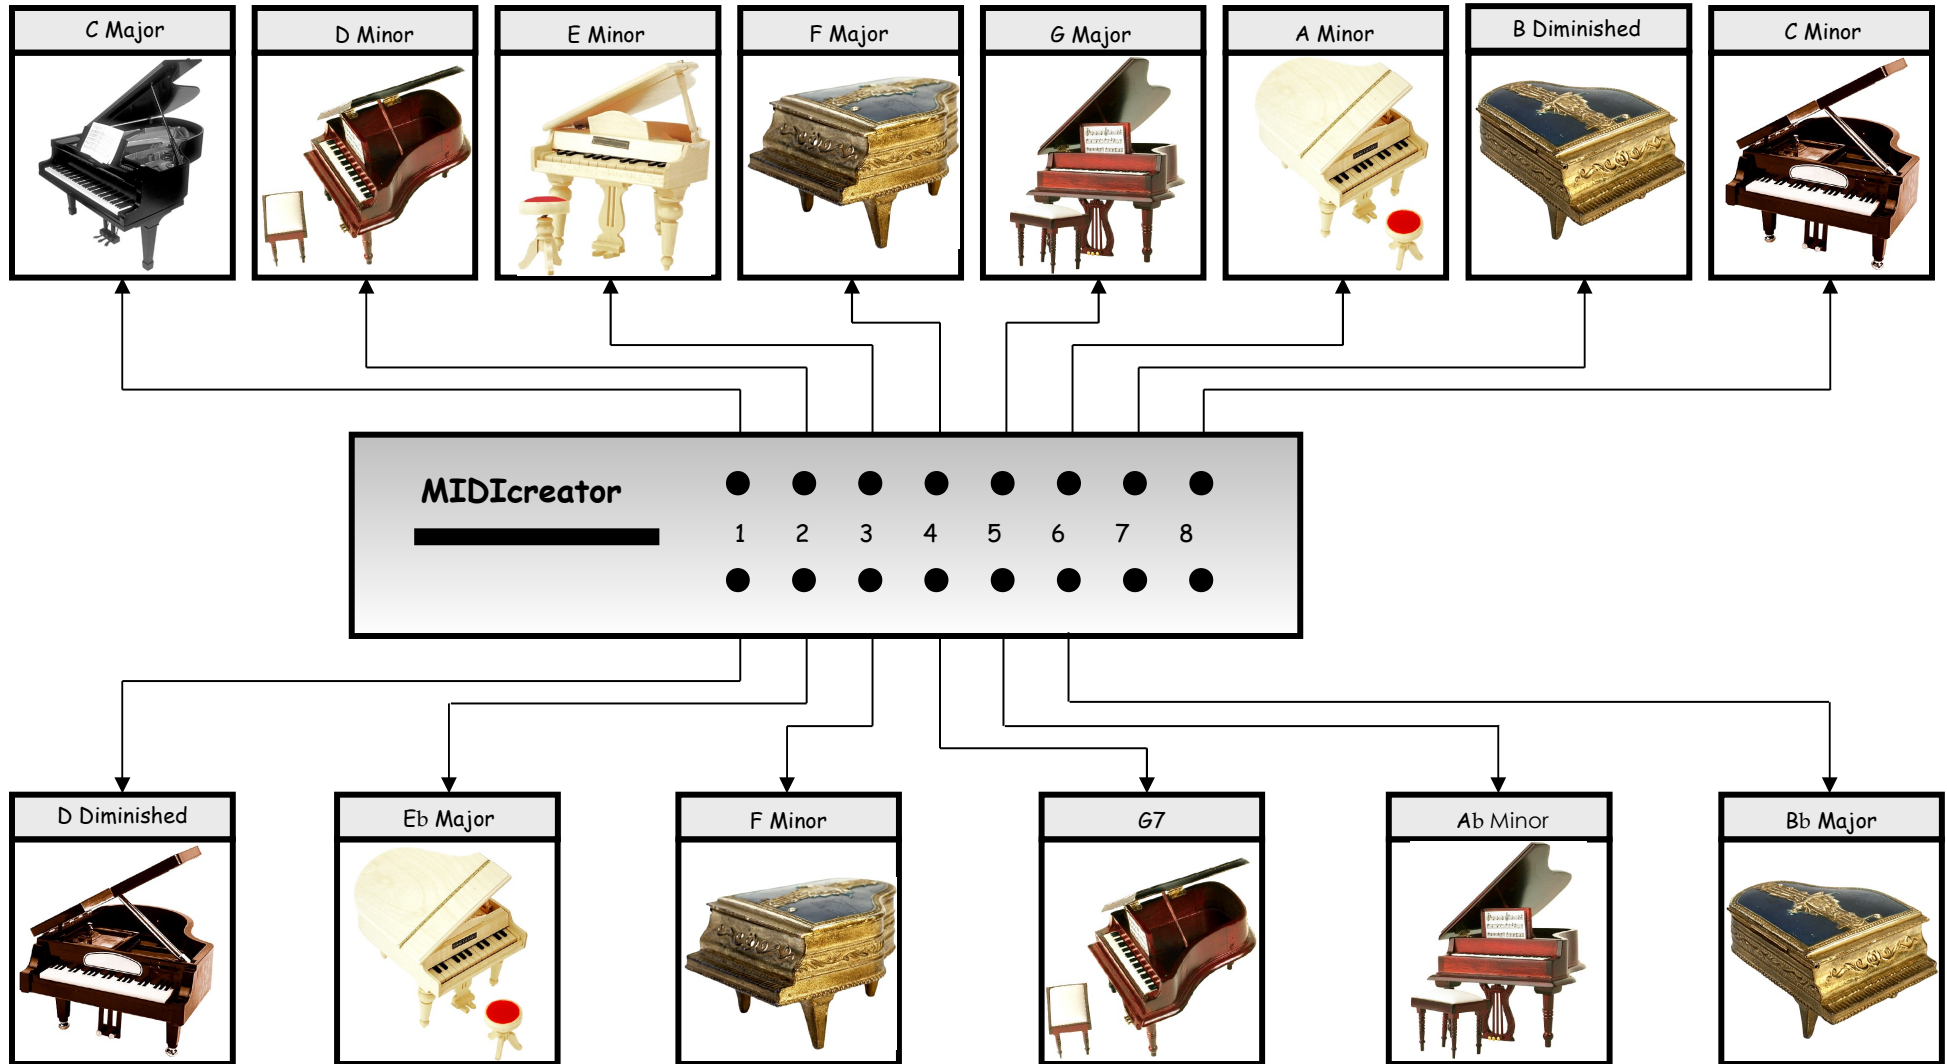

Chord Bank I - Card Details

Switched Sockets - 1-8 Top Row		Proportional Sockets - 1-8 Bottom Row	
Socket	Sound (MIDI)	Socket	Sound (MIDI)
1	Chord (Electric Piano) C Major	1	Chord (Electric Piano) D Diminished
2	Chord (Electric Piano) D Minor	2	Chord (Electric Piano) Eb Major
3	Chord (Electric Piano) E Minor	3	Chord (Electric Piano) F Minor
4	Chord (Electric Piano) F Major	4	Chord (Electric Piano) G add 7 th
5	Chord (Electric Piano) G Major	5	Chord (Electric Piano) Ab Minor
6	Chord (Electric Piano) A Minor	6	Chord (Electric Piano) Bb Major
7	Chord (Electric Piano) B diminished		
8	Chord (Electric Piano) C Minor		