


Program 3 - Drum Kit

immersive
media spaces



inspiring technology for sensory experiences

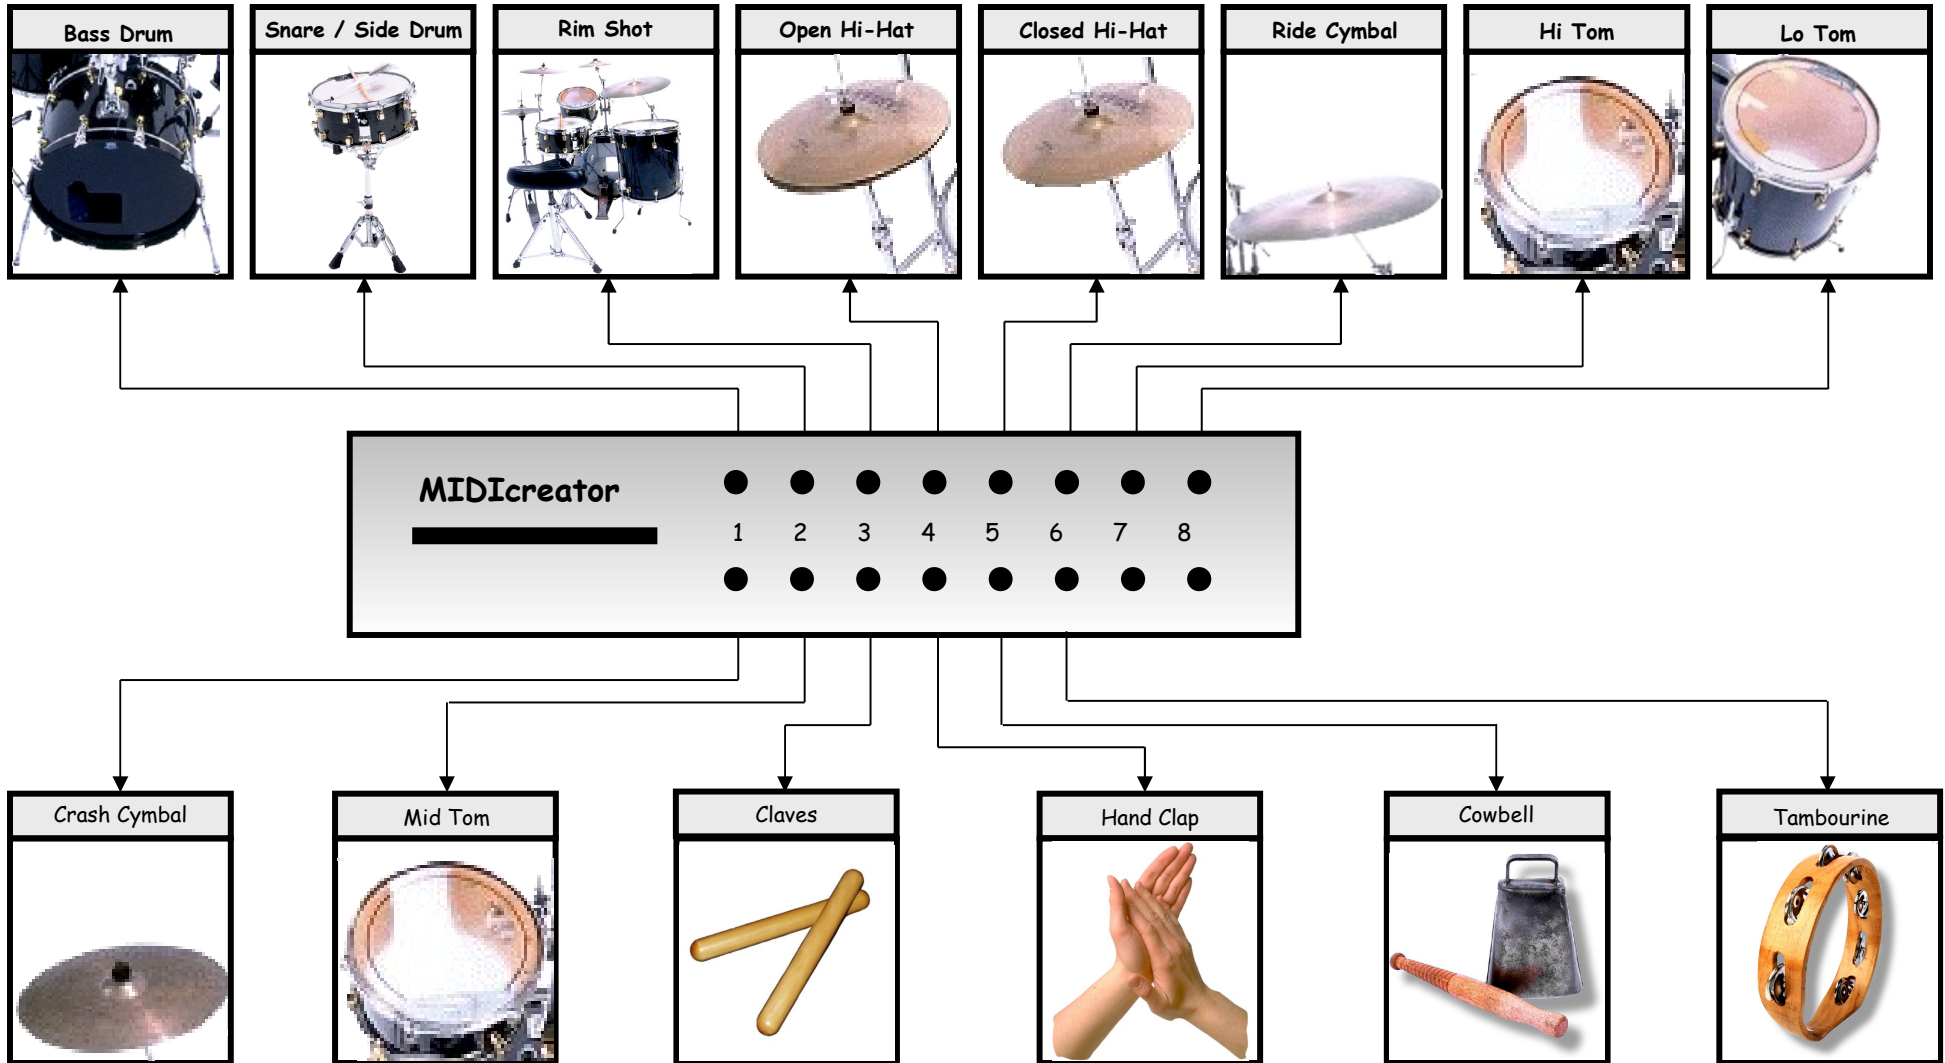

Drum Kit - Card Details

Switched Sockets - 1-8 Top Row		Proportional Sockets - 1-8 Bottom Row	
Socket	Sound (MIDI)	Socket	Sound (MIDI)
1	Bass Drum One Hit	1	Crash Cymbal 50% Threshold
2	Snare / Side Drum One Hit	2	Mid Tom 50% Threshold
3	Rim Shot One Hit	3	Claves 50% Threshold
4	Open Hi-Hat One Hit	4	Hand Clap 50% Threshold
5	Closed Hi-Hat One Hit	5	Cowbell 50% Threshold
6	Ride Cymbal One Hit	6	Tambourine 50% Threshold
7	Hi Tom One Hit		
8	Lo Tom One Hit		